

Supplement 2/61

to Spare Parts List Type 3

New parts:

311 119 293 B	Strap	113 611 363	Plug
311 119 681	Rubber packing	361 611 607	Cup expander
311 129 581 B	Elbow	361 611 639	Cup
311 129 591	Clip	361 611 655	Piston
311 129 597	Retainer	361 611 693	Circlip
311 129 609 B	Control box	361 611 695	Boot
311 129 611 B	Air cleaner	312 611 741	Brake line (RHD)
312 201 055	Fuel tank (RHD)	312 611 805	Line (RHD)
311 255 105	Heat exchanger	312 700 021	Frame (RHD)
311 255 106	Heat exchanger	361 700 021	Frame
311 255 219	Gasket	362 700 021	Frame (RHD)
312 259 305	Fresh air control (RHD)	361 700 041	Sub-frame
111 301 289 B	Gasket	312 705 057	Floor plate (RHD)
312 400 025	Front axle (RHD)	312 705 058	Floor plate (RHD)
342 400 025	Front axle (RHD)	361 705 481	Kick plate
312 401 021	Front axle beam (RHD)	311 705 761	Rubber washer
361 411 309	Stabilizer	311 707 031 B	Bumper
311 415 270	Shim	311 711 175	Coupling-Gearshift rod
312 415 371	Steering drop arm (RHD)	312 721 121	Shaft (RHD)
342 415 371	Steering drop arm (RHD)	312 721 127	Bush (RHD)
341 415 565	Tube – Steering column	312 721 137	Bush (RHD)
312 415 801	Tie rod (RHD)	312 721 141	Pedal-Brake (RHD)
312 415 802	Tie rod (RHD)	311 721 153	Bush
311 415 901 A	Steering damper	312 721 163	Return spring (RHD)
361 501 067	Rear axle tube	312 721 241	Bracket (RHD)
361 501 068	Rear axle tube	312 721 315	Pedal-Clutch (RHD)
361 501 191	Rubber stop	312 721 545	Accelerator pedal shaft (RHD)
311 501 201 AB	Rear axle shaft	312 721 587	Cover plate (RHD)
311 501 201 AR	Rear axle shaft	312 721 591	Seal (RHD)
361 511 115	Torsion bar	312 721 671	Foot support (RHD)
361 511 116	Torsion bar	312 721 672	Foot support (RHD)
113 517 167 F	Thrust washer	312 800 101	Body (RHD)
113 517 167 G	Thrust washer	361 800 101	Body
311 609 631	Push bar	362 800 101	Body (RHD)
361 611 069	Cylinder – Front wheel brake	312 800 401	Body bare (RHD)
113 611 301 D	Reservoir	361 800 401	Body bare
113 611 351	Screw cap	362 800 401	Body bare (RHD)

312 805 051	Instrument panel (RHD)	361 827 025	Rear door
311 805 141	Screw fillister head	361 827 185	Adjustment plate
311 805 149	Tapping screw	361 827 195	Guide piece
312 805 441	Cross panel (RHD)	361 827 301	Hinge
361 809 029	Quarter panel	361 827 302	Hinge
361 809 030	Quarter panel	361 827 325	Bolt
311 809 493 A	Cover	361 827 361	Hinge stay
361 809 557	Bow-Roof	361 827 375	Torsion bar
361 809 559	Bow-Roof	361 827 376	Torsion bar
361 809 601	Quarter panel	361 827 399	Bolt
361 809 602	Quarter panel	361 827 499	Rubber stop
361 809 805 A	End plate	361 827 505	Lock
361 809 806 A	End plate	361 827 511	Striker plate
361 809 809	Cover	361 827 527	Weatherstrip
361 809 810	Cover	361 827 529	Cover plate
361 813 073	Support	361 827 539	Press button
361 813 074	Support	361 827 705	Weatherstrip
361 813 111	Floorplate-Luggage compartment	361 827 715	Weatherstrip
311 813 115	Floorplate-Luggage compartment	312 831 051	Door bare (RHD)
361 813 151	Cover plate-Engine	312 831 052	Door bare (RHD)
361 813 301	Rear apron	111 837 507	Spring
361 813 373 A	Water drain flap	311 837 565 A	Weatherstrip
361 813 417	Extension	111 837 571 D	Lift channel – Door window
361 813 418	Extension	111 837 572 D	Lift channel – Door window
311 813 789 A	Catch	312 845 101	Glass – Windshield (RHD)
361 817 021	Roof	361 845 301 A	Glass – Quarter window
361 817 357	Hinge mounting	361 845 321	Weatherstrip
361 817 358	Hinge mounting	361 845 322	Weatherstrip
361 817 363	Cross member	361 845 331	Glass – Quarter window
361 817 371	Bow-Roof	361 845 341	Weatherstrip
361 817 381	Cross member	361 845 342	Weatherstrip
311 821 021 A	Fender	361 845 501	Glass – Rear window
311 821 022 A	Fender	361 845 521	Weatherstrip
361 821 301	Fender	312 853 191	Molding (RHD)
361 821 302	Fender	312 853 192	Molding (RHD)
361 821 333	Weatherstrip	361 853 345	Trim frame
361 821 334	Weatherstrip	361 853 346	Trim frame
311 821 705 A	Beading	361 853 347	Trim frame
311 821 706 A	Beading	361 853 348	Trim frame
311 821 715 A	Beading	361 853 349	Sleeve
361 821 715	Beading	361 853 355	Trim frame, half
311 821 716 A	Beading	361 853 356	Trim frame, half
361 821 716	Beading	311 853 691	Name "1500"
361 821 781	Beading	361 853 691	Name
361 821 782	Beading	311 853 693	Seal
343 823 531	Cable – Front hood lock	311 853 695 A	Clamping plate

312 857 051	Instrument panel cover (RHD)	361 885 537	Eye
312 857 101	Glove compartment (RHD)	361 885 549	Handle
312 857 121	Lid – Glove compartment (RHD)	361 885 579	Spring
312 857 502	Rear view mirror (RHD)	361 885 753	Rubber lining
312 863 024	Lining – Front panel (RHD)	361 885 805	Padding
312 863 107	Lining – Front panel (RHD)	311 905 851 A	Steering-ignition lock
361 863 465	Rubber lining	311 905 871	Cap
312 863 703 A	Mat – Floor (RHD)	341 919 305	Cigar lighter
361 863 881 A	Lining	311 937 505	Fuse box
361 863 882 A	Lining	311 941 041	Retaining clip
361 863 891	Sound absorber	361 943 117	Bulb holder
361 863 893	Sound absorber	361 943 121	Lens
311 867 013 A	Trim panel – Door	311 943 149	Bracket
311 867 014 A	Trim panel – Door	361 943 191	Gasket
361 867 037	Trim panel – Quarter panel	311 945 241 A	Lens red
361 867 038	Trim panel – Quarter panel	311 951 111 A	Interior
361 867 285	Padded strip	311 953 053	Bulb holder
361 867 286	Padded strip	311 953 054	Bulb holder
361 867 341	Arm rest	312 971 011	Main harness (RHD)
361 867 342	Arm rest	361 971 011	Main harness
361 867 421	Lining – Luggage compartment	362 971 011	Main harness (RHD)
361 867 422	Lining – Luggage compartment	312 971 075	Harness (RHD)
361 867 425	Rubber cap	311 971 077	Harness
361 867 433	Corner lining	N 10 244 1	Bolt, hex. head
361 867 434	Corner lining	N 10 249 1	Bolt, hex. head
361 867 501	Lining – Roof	N 10 355 1	Bolt, hex. head
361 867 527	Covering plate	N 11 132 2	Nut, hex.
361 867 601	Trim panel	N 11 367 2	Tapping screw, cheese head
361 867 615	Clip	N 11 466 3	Tapping screw, countersunk raised head
311 867 935	Insulation	N 11 975 1	Screw, fillister head
361 885 031	Seat rear	N 12 408 1	Lockring
361 885 041	Seat back, rear	N 12 418 1	Lockring
361 885 061	Rear panel	N 12 436 2	Lock washer
361 885 331	Cap	N 12 455 1	Circlip
361 885 341	Support	N 13 890 1	Tapping screw, hex head
361 885 405	Cover	N 14 227 1	Screw, countersunk head
361 885 441	Trim panel	N 14 228 1	Screw, countersunk head
361 885 449	Clip	N 30 057 1	Wrench
361 885 533 A	Beading	SP 340	1 set of cover plates

No longer available:

311 119 293 A Superseded by: 311 119 293 B/N 14 395 2
311 129 575 Superseded by: 311 129 581 B/591/597
311 129 609 Superseded by: 311 129 609 B
311 129 611 Superseded by: 311 129 611 B
311 255 105 A Superseded by: 311 255 105
311 255 106 A Superseded by: 311 255 106
311 809 493 no longer available
311 813 789 Superseded by: 311 813 789 A
311 821 705 Superseded by: 311 821 705 A
311 821 706 Superseded by: 311 821 706 A
311 821 715 Superseded by: 311 821 715 A
311 821 716 Superseded by: 311 821 716 A
311 823 531 A Superseded by: 343 823 531
311 837 507 Superseded by: 111 837 507
311 847 146 B Superseded by: 311 847 145 B
311 863 893 Superseded by: 361 863 893
311 867 013 Superseded by: 311 867 013 A
311 867 014 Superseded by: 311 867 014 A
311 905 851 Superseded by: 311 905 851 A
311 937 035 Superseded by: 311 937 505
311 941 037 Superseded by: 311 941 041
311 941 141 Superseded by: 211 941 141